




便利な4kg袋

水稻初中期一発処理除草剤

# ロータス<sup>®</sup>MX

## 移植同時処理機散布諸元目安表

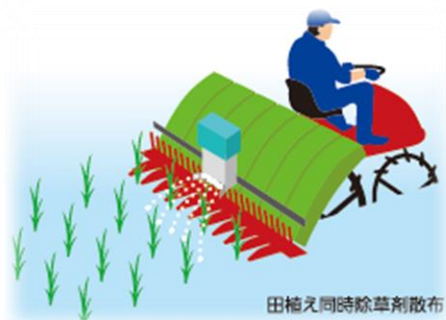



# 移植同時処理機散布諸元目安表

## CS-10

株間 (cm)	条数と横送り回数(回)													PTO検出(POP)		
	4条			5条			6条			8条			10条	4条	5条	6条
	16	20	26	16	20	26	16	20	26	16	20	26				
12	1.4	1.8	2.5	1.8	2.4	3.2	2.3	2.9	3.9	3.1	4.0	5.4	4.6	1.6	2.1	2.6
13	1.5	2.0	2.7	2.0	2.6	3.5	2.5	3.2	4.3	3.4	4.4	5.8	5.0	1.8	2.3	2.8
14	1.7	2.2	3.0	2.2	2.8	3.8	2.7	3.5	4.6	3.7	4.8	6.3	5.4	1.9	2.5	3.1
16	2.0	2.6	3.4	2.6	3.3	4.4	3.1	4.0	5.4	4.3	5.5	7.3	6.2	2.3	2.9	3.6
18	2.3	2.9	3.9	2.9	3.8	5.0	3.6	4.6	6.1	4.9	6.2	8.2	7.1	2.6	3.3	4.1
21	2.7	3.5	4.6	3.5	4.4	5.9	4.2	5.4	7.1	5.8	7.3	9.7	8.3	3.1	4.0	4.8
24	3.1	4.0	5.4	4.0	5.1	6.8	4.9	6.2	8.2	6.7	8.4	11.1	9.5	3.6	4.6	5.6



便利な4kg袋

## SCS-10

株間 (cm)	条数と横送り回数(回)																															
	4条		5条		5条		5条		5条		6条		6条		6条		7条		7条		7条		8条		8条		8条		8条			
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28
14	1.5	1.9	1.5	1.8	2.0	2.5	3.0	1.9	2.2	2.5	3.1	3.7	2.3	2.7	3.0	3.7	4.3	2.7	3.1	3.5	4.2	5.0	2.7	3.1	3.5	4.2	5.0	3.1	3.6	4.0	4.9	5.8
16	1.8	2.3	1.8	2.1	2.4	2.9	3.5	2.3	2.6	2.9	3.6	4.2	2.7	3.1	3.5	4.2	5.0	3.1	3.6	4.0	4.9	5.8	3.1	3.6	4.0	4.9	5.8	3.1	3.6	4.0	4.9	5.8
18	2.1	2.6	2.1	2.4	2.7	3.3	4.0	2.6	3.0	3.3	4.1	4.8	3.1	3.5	4.0	4.8	5.7	3.6	4.1	4.6	5.6	6.6	3.6	4.1	4.6	5.6	6.6	3.6	4.1	4.6	5.6	6.6
22	2.6	3.3	2.6	3.0	3.4	4.2	4.9	3.3	3.7	4.2	5.1	6.0	3.9	4.4	4.9	6.0	7.0	4.5	5.1	5.7	6.9	8.1	4.5	5.1	5.7	6.9	8.1	4.5	5.1	5.7	6.9	8.1
23	2.8	3.4	2.8	3.2	3.6	4.4	5.2	3.4	3.9	4.4	5.3	6.3	4.1	4.6	5.2	6.3	7.4	4.7	5.3	6.0	7.2	8.5	4.7	5.3	6.0	7.2	8.5	4.7	5.3	6.0	7.2	8.5
26	3.2	3.9	3.2	3.6	4.1	5.0	5.9	3.9	4.5	5.0	6.1	7.1	4.6	5.3	5.9	7.1	8.4	5.4	6.1	6.8	8.2	9.7	5.4	6.1	6.8	8.2	9.7	5.4	6.1	6.8	8.2	9.7
30	3.8	4.6	3.8	4.3	4.8	5.8	6.9	4.6	5.2	5.8	7.1	8.3	5.4	6.1	6.9	8.3	9.7	6.2	7.1	7.9	9.5	11.2	6.2	7.1	7.9	9.5	11.2	6.2	7.1	7.9	9.5	11.2



# 移植同時処理機散布諸元目安表

## CS-20

株間 (cm)	条数と横送り回数(回)													PTO検出(POP)		
	4条			5条			6条			8条			10条	4条	5条	6条
	16	20	26	16	20	26	16	20	26	16	20	26				
12	1.3	1.6	2.1	1.6	2.0	2.6	1.9	2.4	3.1	2.6	3.2	4.2	3.6	1.4	1.8	2.2
13	1.4	1.7	2.3	1.7	2.2	2.8	2.1	2.6	3.4	2.8	3.5	4.6	3.9	1.6	2.0	2.4
14	1.5	1.9	2.4	1.9	2.3	3.1	2.3	2.8	3.7	3.0	3.8	4.9	4.2	1.7	2.1	2.5
16	1.7	2.1	2.8	2.1	2.7	3.5	2.6	3.2	4.2	3.4	4.3	5.6	4.8	1.9	2.4	2.9
18	1.9	2.4	3.1	2.4	3.0	3.9	2.9	3.6	4.7	3.9	4.8	6.3	5.5	2.2	2.7	3.3
21	2.3	2.8	3.7	2.8	3.5	4.6	3.4	4.2	5.5	4.5	5.7	7.4	6.4	2.5	3.2	3.8
24	2.6	3.2	4.2	3.2	4.0	5.3	3.9	4.8	6.3	5.2	6.5	8.4	7.3	2.9	3.6	4.4
30	3.2	4.0	5.3	4.0	5.1	6.6	4.8	6.1	7.9	6.5	8.1	10.5	9.1	3.6	4.5	5.5

## CS-30

株間 (cm)	条数と横送り回数(回)													PTO検出(POP)		
	4条			5条			6条			8条			10条	4条	5条	6条
	16	20	26	16	20	26	16	20	26	16	20	26				
12	1.3	1.6	2.2	1.6	2.1	2.7	2.0	2.5	3.3	2.7	3.4	4.4	3.8	1.5	1.9	2.3
13	1.4	1.8	2.4	1.8	2.3	3.0	2.2	2.7	3.6	2.9	3.7	4.8	4.1	1.6	2.0	2.4
14	1.5	1.9	2.5	1.9	2.4	3.2	2.3	2.9	3.9	3.1	4.0	5.2	4.5	1.7	2.2	2.6
16	1.8	2.2	2.9	2.2	2.8	3.7	2.7	3.4	4.4	3.6	4.5	5.9	5.1	2.0	2.5	3.0
18	2.0	2.5	3.3	2.5	3.2	4.1	3.0	3.8	5.0	4.1	5.1	6.7	5.8	2.3	2.8	3.4
21	2.3	2.9	3.9	2.9	3.7	4.8	3.5	4.5	5.8	4.8	6.0	7.8	6.7	2.6	3.3	4.0
24	2.7	3.4	4.4	3.4	4.2	5.5	4.1	5.1	6.7	5.5	6.8	8.9	7.7	3.0	3.8	4.6
30	3.4	4.2	5.5	4.2	5.3	6.9	5.1	6.4	8.4	6.8	8.6	11.2	9.6	3.8	4.8	5.8



便利な4kg袋



# 移植同時処理機散布諸元目安表

## SCS-30

株間 (cm)	条数と横送り回数(回)																											
	4条		5条		5条		5条		5条		6条		6条		6条		7条		7条		7条		8条		8条		8条	
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	
14	1.4	1.7	1.4	1.6	1.8	2.2	2.6	1.7	2.0	2.2	2.6	3.1	2.0	2.3	2.6	3.1	3.6	2.3	2.6	2.9	3.5	4.2						
16	1.6	2.0	1.6	1.9	2.1	2.5	2.9	2.0	2.3	2.5	3.0	3.5	2.3	2.6	2.9	3.5	4.2	2.7	3.0	3.4	4.1	4.8						
18	1.9	2.3	1.9	2.1	2.3	2.8	3.3	2.3	2.5	2.8	3.4	4.0	2.6	3.0	3.3	4.0	4.7	3.0	3.4	3.8	4.6	5.4						
22	2.3	2.8	2.3	2.6	2.9	3.5	4.1	2.8	3.1	3.5	4.2	4.9	3.2	3.7	4.1	4.9	5.7	3.7	4.2	4.7	5.6	6.6						
23	2.4	2.9	2.4	2.7	3.0	3.6	4.3	2.9	3.3	3.6	4.4	5.1	3.4	3.8	4.3	5.1	6.0	3.9	4.4	4.9	5.9	6.9						
26	2.7	3.3	2.7	3.1	3.4	4.1	4.8	3.3	3.7	4.1	5.0	5.8	3.9	4.3	4.8	5.8	6.8	4.4	5.0	5.5	6.7	7.8						
30	3.2	3.8	3.2	3.6	4.0	4.8	5.6	3.8	4.3	4.8	5.8	6.7	4.5	5.0	5.6	6.7	7.9	5.1	5.8	6.4	7.7	9.0						

## ヤンマー-PSR852

	37株	40株	43株	45株	50株	55株	60株	65株	70株	80株	85株	90株
4条	3.2	2.9	2.7	2.5	2.2	2.0	1.8	1.6	1.5	1.3	1.2	1.1
5条	4.1	3.7	3.4	3.3	2.9	2.6	2.4	2.1	2.0	1.7	1.6	1.5
6条	5.0	4.5	4.2	4.0	3.5	3.2	2.9	2.6	2.4	2.1	1.9	1.8
7条	5.9	5.4	5.0	4.7	4.2	3.8	3.5	3.2	2.9	2.5	2.3	2.2
8条	6.8	6.3	5.8	5.5	4.9	4.4	4.0	3.7	3.4	2.9	2.7	2.5

便利な4kg袋





# 移植同時処理機散布諸元目安表



便利な4kg袋

イノベーター II 800シリーズ (MGT-800A、2014年～)

①

## 4条植え

株間 (cm)	株数 (株/坪)	横送り回数							
		16回 目盛	18回 目盛	20回 目盛	22回 目盛	24回 目盛	26回 目盛	28回 目盛	30回 目盛
30	37	2.00	2.50	2.75	3.00	3.25	3.50	3.75	4.00
28	40	1.75	2.25	2.50	2.75	3.00	3.25	3.50	3.75
26	42	1.75	2.00	2.25	2.50	3.00	3.00	3.25	3.50
25	45	1.50	1.75	2.25	2.50	2.75	3.00	3.25	3.25
22	50	1.50	1.50	1.75	2.00	2.25	2.50	2.75	3.00
18	60	1.00	1.25	1.50	1.50	1.75	2.00	2.25	2.50
16	70	1.00	1.00	1.25	1.50	1.50	1.75	1.75	2.00
14	80	-	1.00	1.00	1.25	1.25	1.50	1.50	1.75
12	90	-	-	-	1.00	1.00	1.25	1.25	1.50

## 6条植え

株間 (cm)	株数 (株/坪)	横送り回数							
		16回 目盛	18回 目盛	20回 目盛	22回 目盛	24回 目盛	26回 目盛	28回 目盛	30回 目盛
30	37	3.25	3.50	4.00	4.25	4.75	5.00	5.50	5.75
28	40	3.00	3.50	3.75	4.00	4.50	4.75	5.00	5.50
26	42	3.00	3.25	3.50	3.75	4.00	4.50	4.75	5.00
25	45	2.75	3.00	3.25	3.75	4.00	4.25	4.50	4.75
22	50	2.25	2.75	3.00	3.25	3.50	3.75	4.00	4.25
18	60	1.75	2.00	2.50	2.75	3.00	3.25	3.50	3.50
16	70	1.50	1.75	2.00	2.25	2.50	3.00	3.00	3.25
14	80	1.25	1.50	1.75	2.00	2.25	2.50	2.75	3.00
12	90	1.00	1.25	1.50	1.50	1.75	2.00	2.25	2.50

## 5条植え

株間 (cm)	株数 (株/坪)	横送り回数							
		16回 目盛	18回 目盛	20回 目盛	22回 目盛	24回 目盛	26回 目盛	28回 目盛	30回 目盛
30	37	2.75	3.00	3.50	3.75	4.00	4.25	4.50	4.75
28	40	2.50	3.00	3.25	3.50	3.75	4.00	4.25	4.50
26	42	2.25	2.75	3.00	3.25	3.50	3.75	4.00	4.25
25	45	2.25	2.50	3.00	3.25	3.50	3.50	3.75	4.00
22	50	1.75	2.00	2.50	2.75	3.00	3.25	3.50	3.75
18	60	1.50	1.75	1.75	2.00	2.50	2.75	3.00	3.00
16	70	1.25	1.50	1.50	1.75	2.00	2.25	2.50	2.75
14	80	1.00	1.25	1.50	1.50	1.75	1.75	2.00	2.25
12	90	1.00	1.00	1.25	1.25	1.50	1.50	1.75	1.75

## 7条植え

株間 (cm)	株数 (株/坪)	横送り回数							
		16回 目盛	18回 目盛	20回 目盛	22回 目盛	24回 目盛	26回 目盛	28回 目盛	30回 目盛
30	37	3.75	4.25	4.50	5.00	5.50	5.75	6.25	6.50
28	40	3.50	4.00	4.25	4.75	5.00	5.50	5.75	6.25
26	42	3.25	3.75	4.00	4.25	4.75	5.00	5.50	5.75
25	45	3.25	3.50	3.75	4.25	4.50	5.00	5.25	5.50
22	50	2.75	3.25	3.50	3.75	4.00	4.25	4.75	5.00
18	60	2.25	2.50	3.00	3.25	3.50	3.75	4.00	4.25
16	70	1.75	2.25	2.50	2.75	3.00	3.25	3.50	3.75
14	80	1.50	1.75	2.00	2.50	2.75	3.00	3.25	3.25
12	90	1.25	1.50	1.75	2.00	2.25	2.50	2.75	3.00

# ロータス<sup>®</sup>MX

## 移植同時処理機散布諸元目安表



### イノベーターII 800シリーズ (MGT-800A、2014年～) ②

#### 8条植え

株間 (cm)	株数 (株/坪)	横送り回数							
		16回 目盛	18回 目盛	20回 目盛	22回 目盛	24回 目盛	26回 目盛	28回 目盛	30回 目盛
30	37	4.25	4.75	5.25	5.50	6.00	6.50	6.75	7.00
28	40	4.00	4.50	4.75	5.25	5.75	6.00	6.50	6.75
26	42	3.75	4.00	4.50	5.00	5.25	5.75	6.00	6.50
25	45	3.50	4.00	4.25	4.75	5.25	5.50	6.00	6.25
22	50	3.25	3.50	4.00	4.25	4.50	5.00	5.25	5.50
18	60	2.50	3.00	3.25	3.50	3.75	4.00	4.50	4.75
16	70	2.25	2.50	3.00	3.25	3.50	3.75	4.00	4.25
14	80	1.75	2.25	2.50	2.75	3.00	3.25	3.50	3.75
12	90	1.50	1.75	2.00	2.25	2.50	3.00	3.00	3.25

#### 10条植え

株間 (cm)	株数 (株/坪)	横送り回数							
		16回 目盛	18回 目盛	20回 目盛	22回 目盛	24回 目盛	26回 目盛	28回 目盛	30回 目盛
30	37	5.25	5.75	6.25	6.75	7.00	7.50	7.75	8.25
28	40	4.75	5.50	6.00	6.25	6.75	7.00	7.50	7.75
26	42	4.50	5.00	5.50	6.00	6.50	6.75	7.00	7.50
25	45	4.25	4.75	5.25	5.75	6.25	6.50	7.00	7.25
22	50	4.00	4.25	4.75	5.25	5.50	6.00	6.25	6.75
18	60	3.25	3.50	4.00	4.25	4.75	5.00	5.50	5.75
16	70	3.00	3.25	3.50	4.00	4.25	4.50	4.75	5.25
14	80	2.50	3.00	3.25	3.50	3.75	4.00	4.25	4.50
12	90	2.00	2.50	2.75	3.00	3.25	3.50	3.75	4.00

### やまびこ GS2

便利な4kg袋

剤のグループ分け

	A	B	C	D
7 (ダイヤル大)				
6				
5				
4				
3				
2				
1 (ダイヤル小)				